

FLR-RF CONTROL

- Residential
- Brink
- Accessories for Flair and CHR PRO
- Accessories



Wireless wall controllers type FLR-RF CONTROL

Wireless touch controller for **FLAIR** and **CHR PRO** devices

Brand

- Brink

Application

- **FLR-RF USB** is required to connect the sensor(s) to the heat recovery unit
- Only in combination with FLAIR and CHR PRO devices manufactured after July 2022
- It is possible to connect up to 12 FLR-RF components per device
- Battery powered, CR2032 battery included, permanent power supply possible
- Maximum 4 controls type **FLR-RF CONTROL** per heat recovery unit
- Filter indication and error messages via LED

Specifications

- Control with 5 positions
 - Position 1: Absence position
 - Position 2: Presence position
 - Position 3: Maximum ventilation position
 - Position 4: Boost function (30min.)
 - Position 5: Holiday mode
- Power supply: supplied 3V lithium battery type CR2032
- Error code and filter indication
- Frequency: 868 MHz
- Colour: RAL9010 (white)
- Ambient temperature: 0°C to 50°C
- Storage temperature: -20°C to 60°C
- Range: 300m, in open field

Mounting

- Directly on the wall via supplied mounting plate
- On standard flush-mounted box, mandatory if permanent power supply is to be provided.
- At a height of 1,5m
- Finishing plate included

Accessories

- Transmitter-receiver USB stick for communication with Flair and CHR PRO device, type **FLR-RF USB**, 1 FLR-RF USB can communicate with a maximum of 12 FLR-RF components (required accessory)
- Power adapter 230Vac to 5V for permanent power supply type **FLR-RF TRAFO**