



J.01

Residential Air to Water Heat **Pumps**

COD

R-AQUA Accessories

Coding plugs type COD

R-AQUA's CGW range of air/water heat pumps are suited for heating and cooling as a standard.

In certain cases, it is necessary to permanently disable the cooling function to qualify for a premium. The purchase and installation of the coding plug (heating only) permanently disables the cooling function on the unit.

Brand

R-AQUA

Application

Permanent deactivation of the cooling function

Installation

- 1. Turn off the power supply to the heat pump.
 2. Remove the blue coding plug from the circuit board.
 3. Insert the heating-only coding plug into the unit.
 4. Turn power back on to the heat pump.

- 5. The unit is now operable in heating only mode.

| Technical data | |
|-------------------|--------------------------|
| Type of heat pump | Coding plug heating only |
| CGW-IU XX A1 | COD-IU-H |
| CGW-IU XX M1 | |
| CGW-ID XX A1 | COD-ID-H |
| CGW-ID XX M1 | |
| CGW-M XX A1 | COD-M-H |
| CGW-M XX M1 | |
| CGW-M SG XX A1 | COD-M-H |
| CGW-M SG XX M1 | |